



8 button membrane SW to OSD Control Board CN2 Pin Assignment	
pin #	description
10	Common Ground
9	Select Up
8	Select Down
7	Adjust Up/Increase/Right
6	Adjust Down/Decrease/Left
5	Menu
4	Brightness Down
3	Brightness Up
2	ON/OFF
1	Common Ground

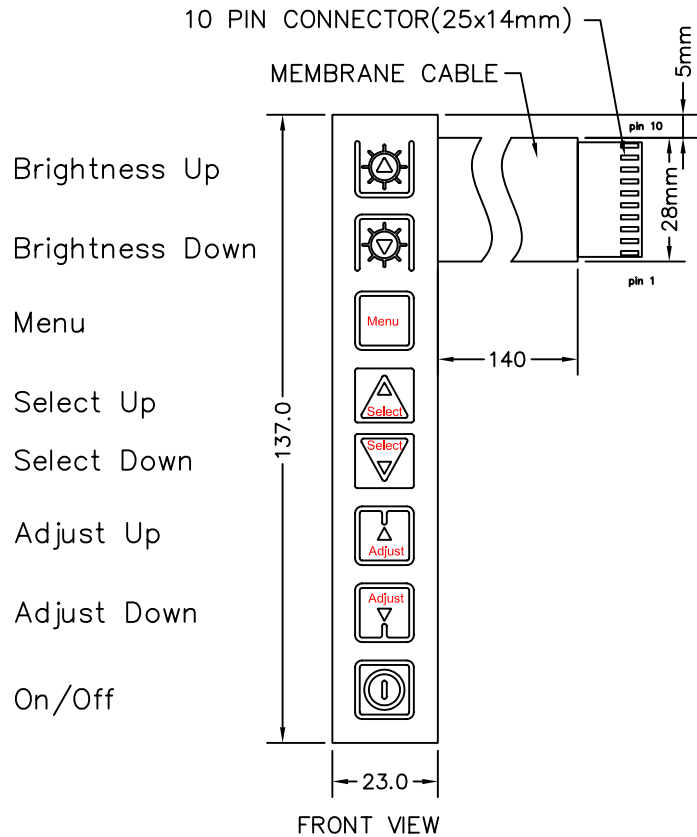


Membrane Switch:
P/N:356301021

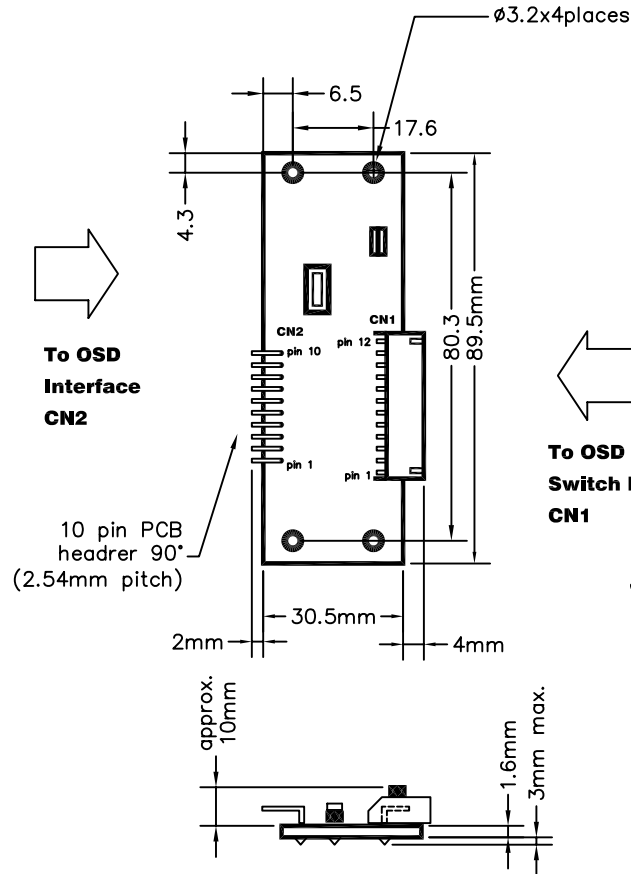

PCB OSD INTERFACE:
P/N:416100110

PCB OSD Control Board CN1 Pin Assignment	
pin #	description
12	no connection
11	OSD Select UP
10	OSD Select Down
9	OSD Plus/Right
8	OSD Minus/Left
7	OSD Menu
6	Ground
5	Backlight Brightness VR pin B
4	Backlight Brightness VR pin WP
3	Backlight Brightness VR pin A
2	Power Switch B
1	Power Switch A

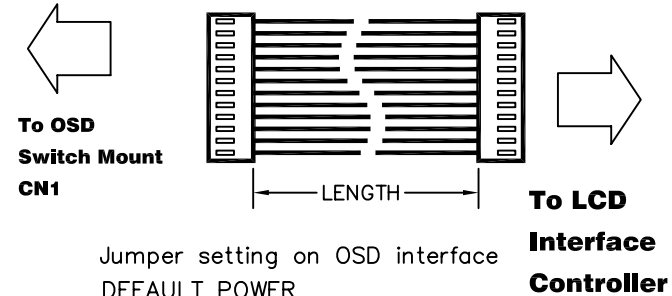

Jumper setting on OSD interface
DEFAULT POWER
 JP1 : 1-2 closed - OFF
 2-3 closed - ON
BRIGHTNESS INC/DEC SWITCH
 JP2 : 1-3 & 2-4 closed - SWAP
 1-2 & 3-4 closed - NORMAL

OSD Cable:
P/N:420680260 (12/12WAY), 150mm
Other options :
P/N:426120400 (12/12WAY), 300mm
P/N:426120410 (12/12WAY), 610mm



Title:
OSD Control Assembly

NOTE:
All dimensions are in mm

Date:
31.08.04

Kit 60120 OSD GUIDE