

Application Note

JPEG Transition Effects

(for M3-300/M3-310, VS-300, VideoFlyer™ 10.2"/15"/15.5"/21.5")

Version 1.4

Table of Contents

1	JPEG Transition Effects	3
1.1	Startup Configuration Mode	3
1.2	Setup Transition Type	5
2	Transition Types.....	6

1 JPEG Transition Effects


This brief guide explains the use of the JPEG Transition Effect on the ViewStream™ 300, M3-300/M3-310 and VideoFlyer™ 10"/15"/15.6"/21.5". The JPEG Transition Effect is an enhanced feature enabling 14 transition choices between the JPEG files.

1.1 Startup Configuration Mode

The selection of the Transition Effect can be set in the Startup Configuration Mode. Connect a 8-button switch mount to your ViewStream™ 300, M3-300/M3-310 or VideoFlyer™ 10"/15"/15.6"/21.5" and enter to Configuration mode menu.


The 8-button switch mount connections are shown in the following examples:

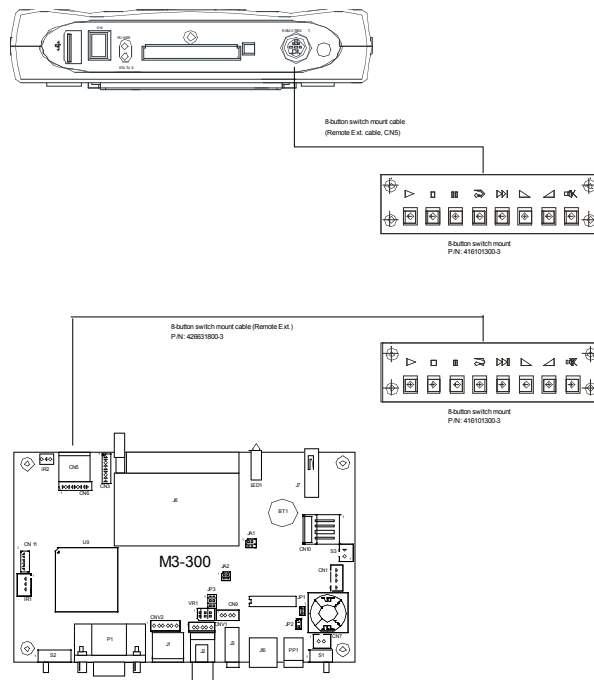Example 1 – Connect 8-button switch mount to Remote Ext. connector on ViewStream™ 300 or M3-300.




Example 2 – Connect 8-button switch mount to CN6 connector on M3-300 and M3-310

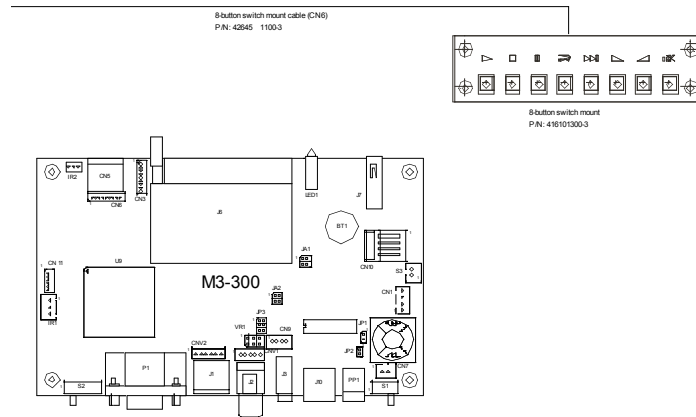M3-300




M3-310

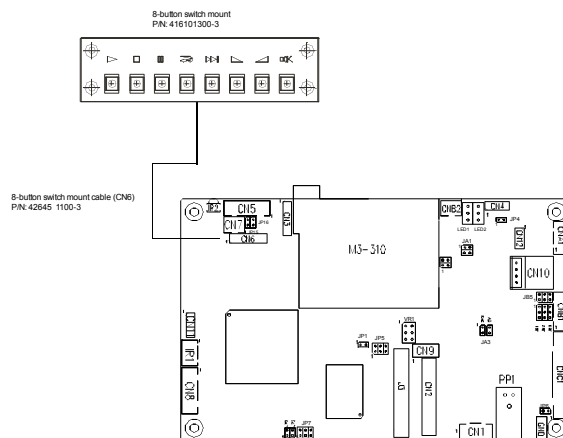

1.2 Setup Transition Type

Set the Transition Effect at “**JPEG TRANS TYPE**”. There are 14 separate choices that can be set. Please see **Section 2- Transition Types** for some examples.






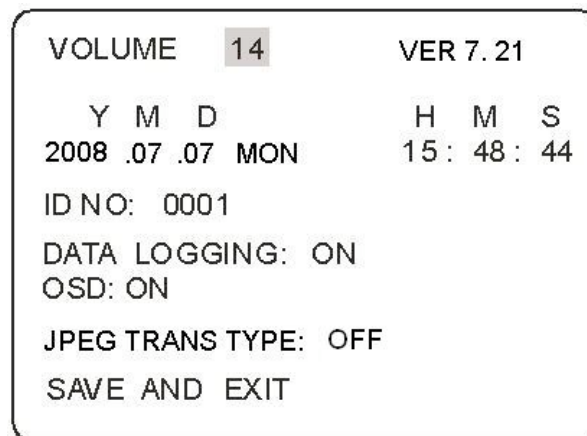
- Holding button 8 and power on to enter the Configuration mode menu.









- Move to the “**JPEG TRANS TYPE**”. (The default type no. is **OFF**)
- Press button 8 to select or press button 7 or button 6 for up/dn.
- Press button 7 or button 6 to save and exit.

2 Transition Types

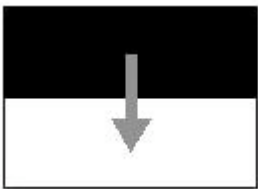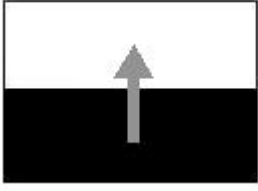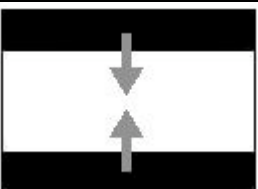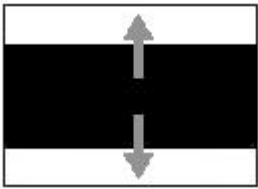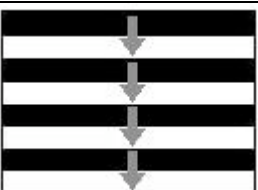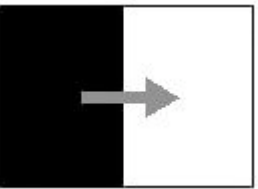Here is the list of choices for JPEG Transition effects:

Transition Type no.	Description	Demonstration
OFF	No transition effect	N/A
01	Wipe from top to bottom	
02	Wipe from bottom to top	
03	Wipe from top & bottom to centre	
04	Wipe from centre to top & bottom	
05	Vertical Blinds	
06	Wipe from left to right	

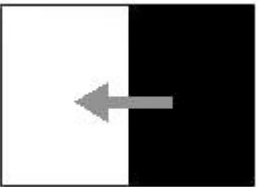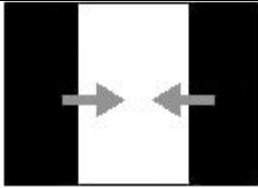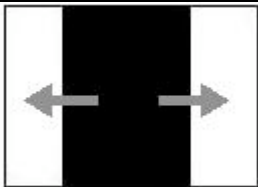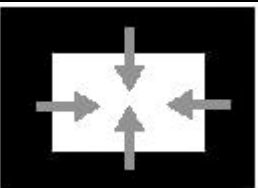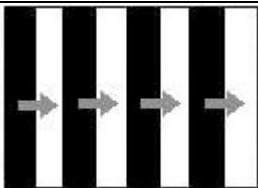07	Wipe from right to left	
08	Wipe from left & right to centre	
09	Wipe from centre to left & right	
10	Wipe from four edges to centre	
11	Horizontal Blinds	
12	Fade IN/OUT	
RANDOM	Random Effects	

CONTACT DETAILS

USA: Digital View Inc.
18440 Technology Drive
Building 130
Morgan Hill, CA 95037
Tel: (1) 408-782 7773 **Fax:** (1) 408-782 7883
Sales: ussales@digitalview.com

EUROPE: Digital View Ltd
6 Marylebone Passage
London
W1W 8EX
UK
Tel: (44) (0)20 7631 2150 **Fax:** (44) (0)20 7631 2156
Sales: uksales@digitalview.com

ASIA: Digital View Ltd
16th floor Millennium City 3
370 Kwun Tong Road
Kwun Tong
Hong Kong
Tel: (852) 2861 3615 **Fax:** (852) 2520 2987
Sales: hksales@digitalview.com