

# Firmware Upgrade Procedure: RM-DN5 / VS-500 / RP-500

(With both kernel and application firmware upgraded)

## What do you need?

Before upgrading the firmware on the RM-DN5 / VS-500 / RP-500, you need:

- RM-DN5 or VS-500 / RP-500
- BIN code (app.dn5)
- Compact Flash card

## Start up

1. Copy the app.dn5 file on to a blank CompactFlash card (at root “\” directory). The BIN file must be stored in the specific location as shown in the table below.

Model	BIN name	Location of BIN
RM-DN5	kernel.dn5 app.dn5	Root directory (\)
ViewStream 500 / VS-500	kernel.dn5 app.dn5	Root directory (\)
Remote Player 500 / RP-500	kernel.dn5 app.dn5	Root directory (\)

2. Insert the CF card that has the both bin files stored on root directory (\). Turn on the RM-DN5 / VS-500 / RP-500 and video display.
3. The code will be upgraded automatically and show the following message on screen:

Kernal upgrading --- Don't power o ff

4. When completed, you will see the following screen showing the firmware was successfully loaded. Remove the CF Card and then reboot the system again.

Application upgrading --- Don't power o ff

→ Reboot

## Verifying firmware version

To verify if the firmware was successfully loaded, start up the unit will show the boot up message that also include the kernel and firmware version.

```
KernelVersion: V2.83.01.10
Version: E0.01.10a
MAC:000562010095
```

If you have button connected on the unit, you may see the version on OSD config. menu. Please follow the steps as below:

1. Turn off the RM-DN5 / VS-500 / RP-500.
2. Holding button 8 (for 30 seconds) and power on to enter the configuration mode menu.
3. Use button 8 for selection, button 6 and 7 for values change.
4. To save and exit, move the selection on "Save and Exit" and then press button 7.

Version no.

```
Configuration Mode: xx.xx.x
Volume: 32
YY:09 MM:04 DD:22 hh:13 mm:34 ss:38
OSD: OFF
Datalog: OFF
Save and Exit
```