

Application Note

Baud rate selection

P/N 4172100XX-3

Version 1.00


Procedure for showing how to select the baud rate on SVX-1920 :

Firmware use : V0.10.00 or higher

Jumper function :

JC1-3 = Closed : Enable the baud rate selection function

 JC1-3 = Open : Disable the baud rate selection function and default set as 2400.

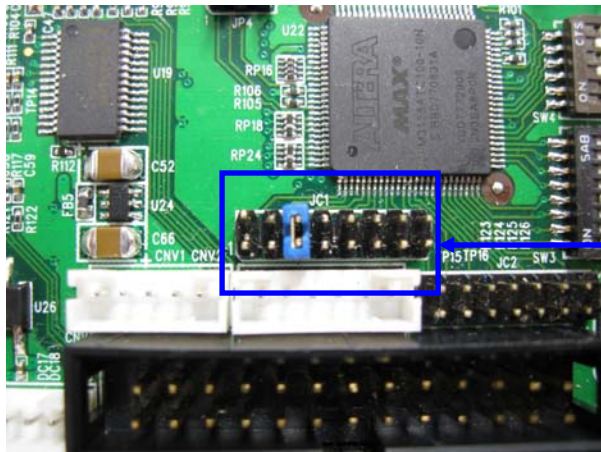

JC1-3 closed to enable the baud rate selection function

 
STEP 1 :

Set JC1-3 = closed.


STEP 2 :

Press and hold "MENU" button on the OSD switch mount and turn on the controller to enter the "Programming mode".

"Programming mode" wordings will display on screen on the target programming board. (See below) :

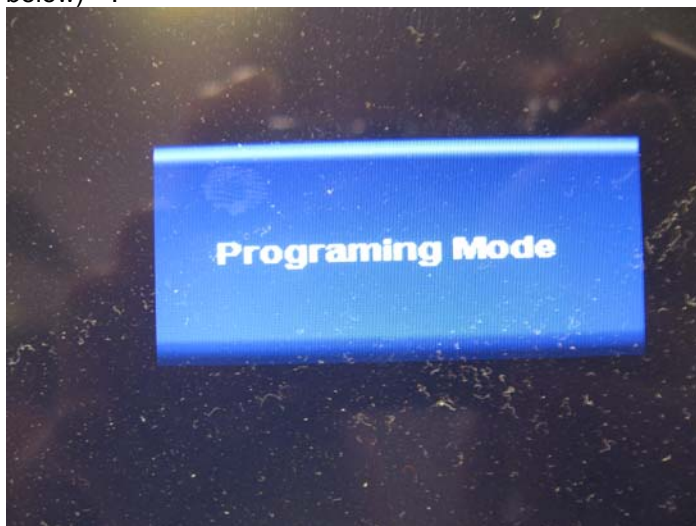


 
Step 3 : Press “MENU” key to go into the “DDC Programming” & “Set RS232 Baud Rate” page.
(See below) :

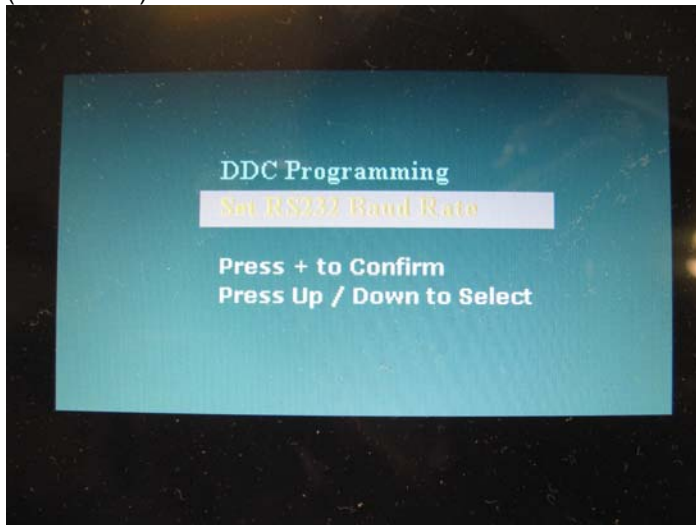

Step 4 : Select “Set RS232 Baud Rate” setting, then press “+” to enter the sub menu page.

  Step 5 : Choose the appropriate baud rate settings (2400 / 4800 / 9600 / 14400 / 19200 / 38400 / 57600 / 115200).

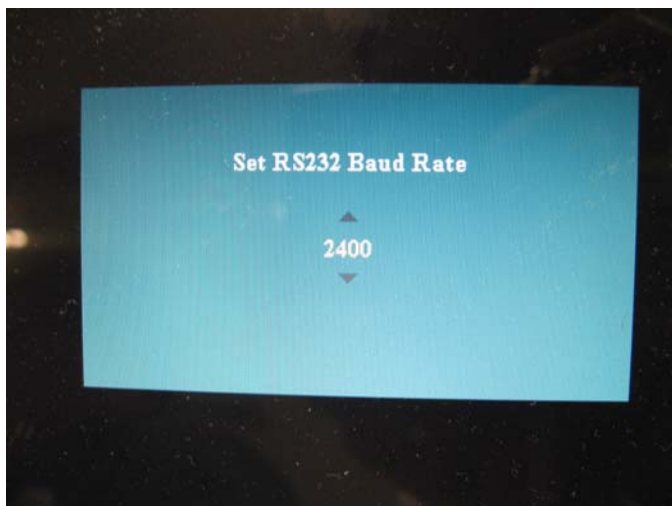

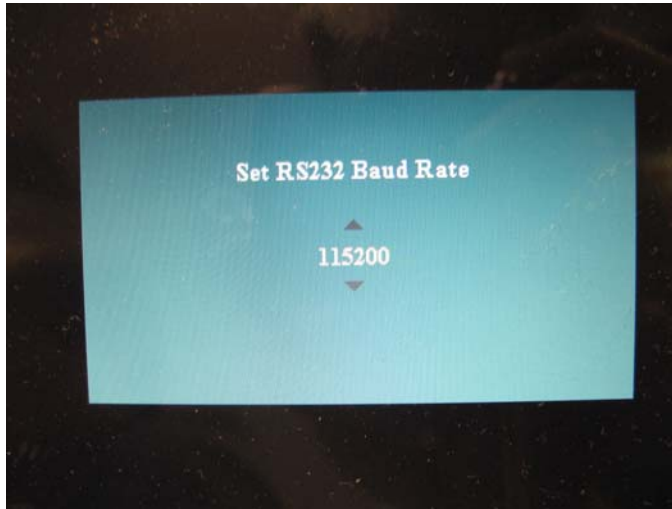

Step 5 : Press “MENU” key to return previous menu.

Step 6 : Shut off the controller

CONTACT DETAILS

USA: Digital View Inc.
18440 Technology Drive
Building 130
Morgan Hill, CA 95037
Tel: (1) 408-782 7773 **Fax:** (1) 408-782 7883
Sales: ussales@digitalview.com

EUROPE: Digital View Inc.
Marylebone Passage
London
W1W 8EX
UK
Tel: (44) (0)20 7631 2150 **Fax :** (44) (0)20 7631 2156
Sales : uksales@digitalview.com

ASIA: Digital View Ltd.
16th floor Millennium City 3
370 Kwun Tong Road
Kwun Tong
Hong Kong
Tel: (852) 28613615 **Fax:** (852) 25202987
Sales: hksales@digitalview.com