


Light sensor setup on SVX-4096 / SVX-4096-120


1. Connection

Connect the light sensor pins to CN6 as follow:

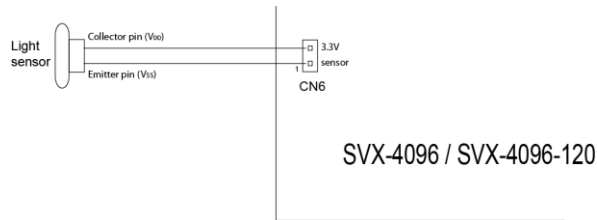

2. OSD configuration

In the OSD menu, under 'Communication' select 'Network'

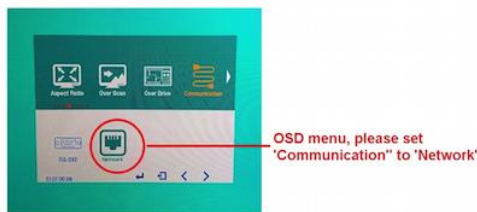

3. Configure the light sensor settings

Note: The following uses the web browser via the Ethernet connection on the controller board. See the manual for details.

Select "Light Sensor Settings" in the built-in browser menu page, enter the ambient value of light level and backlight brightness.


For example

Level 1 = 500 mVolts

Backlight = 100%

Level 2 = 50 mVolts

Backlight = 12%

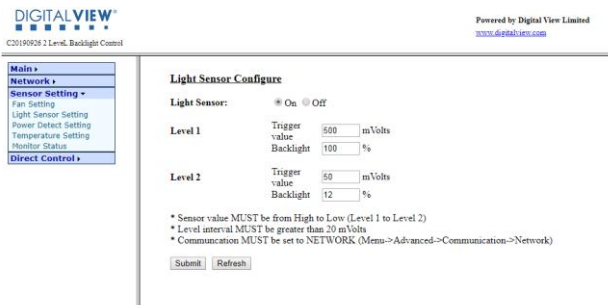


4. How it works

Based on the above example it works as shown below:

Example

Level 1 = 500 mVolts Backlight = 100%
 Level 2 = 50 mVolts Backlight = 12%

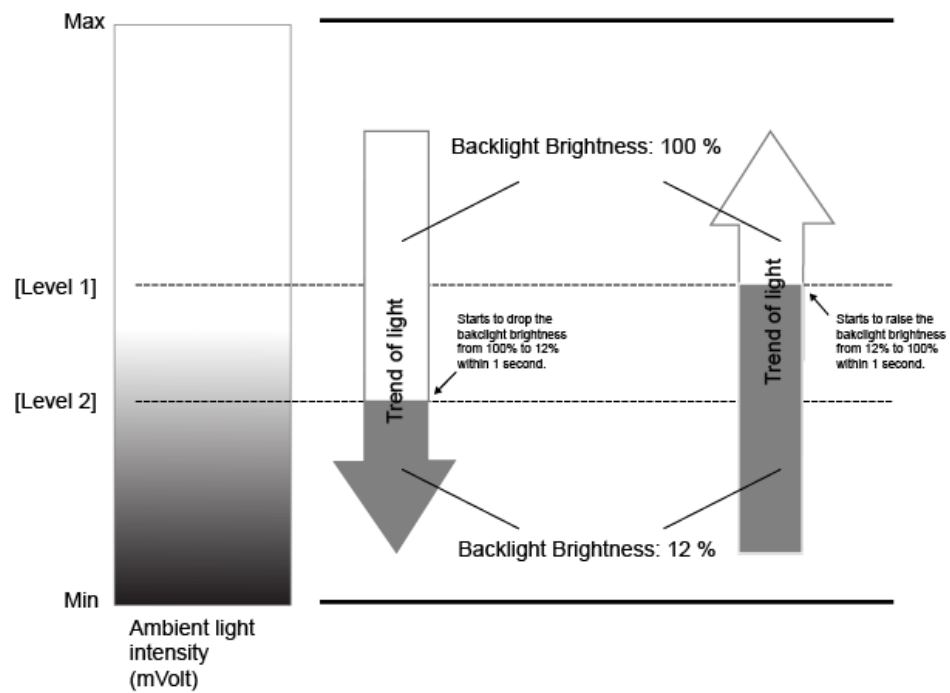

[END]